


THE RELISH GUITARS TOUCH PAD EXPLAINED

With Relish Guitars Switzerland's patented Touch Pad your tone options go beyond the toggle realm. Choose from up to 17 positions from neck to bridge - both in humbucker and split coil mode - to find your sweet spot.


HOW TO CHANGE PICKUP POSITIONS

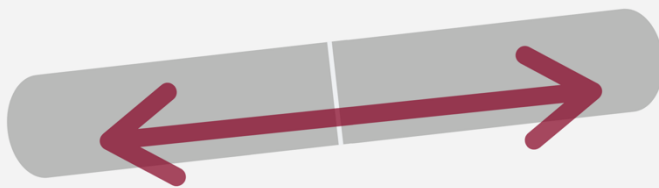

Slide finger along touch pad or touch at desired position.

15 smooth transitions from neck to bridge.


BRIDGE / NECK % MIX EXAMPLES

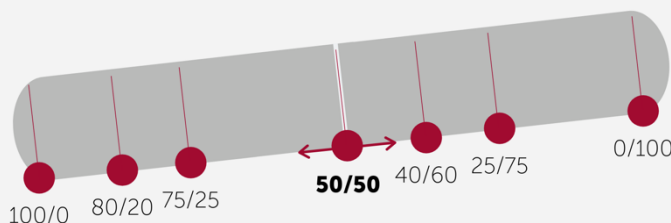

Slide finger along touch pad or touch at desired positions.



HOW TO SPLIT NECK PICKUP

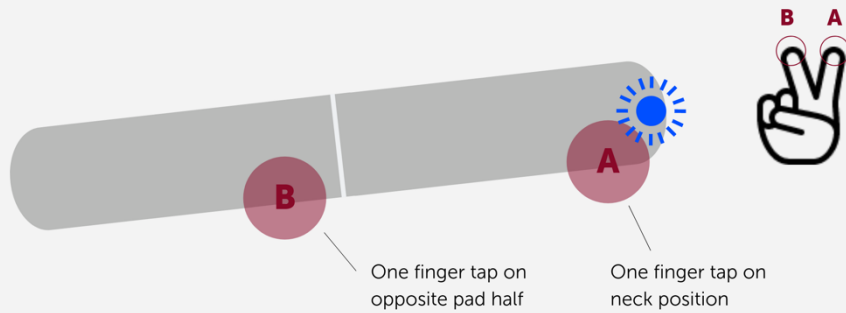


One finger tap on opposite pad half

One finger tap on neck position

Tap with index (A) and middle finger (B) simultaneously.

Blue light indicates coils are split. Red light indicates low battery status (<10%).

HOW TO SPLIT BRIDGE PICKUP

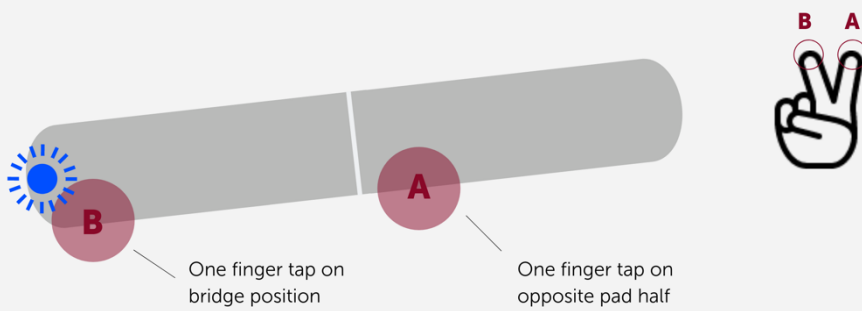

One finger tap on bridge position

One finger tap on opposite pad half

Tap with index (A) and middle finger (B) simultaneously.

Blue light indicates coils are split. Red light indicates low battery status (<10%).

HOW TO ADJUST PICKUP HEIGHT

Twist golden knob clockwise with two fingers to elevate pickups.



Tilt adjustment by allen key on pickup mounting frame on guitar.

